

HWD-AP

TOUCH SCREEN
THERMOSTAT

www.hwdev.hu

2010

USER'S GUIDE

TOUCH SCREEN UNIT

The thermostat can be used for external GSM center manager. In this case, the center receives the GSM calls and controls the boiler operation. The management unit of the set temperature of 39 degrees by the conversion of 06 lakes, and displays the current room temperature at regular intervals, you will automatically be forwarded to the Centre for GSM as well.



If the thermostat to buy a separate unit.

In this case, the device will work like a standard digital thermostat. Here too, the two buttons to adjust the temperature up and down. The furnace control performs the built-in relay.


Commissioning STEPS

TERMOSTAT

1. Step Of the box, take out the thermostat.



2. Step Take off the back of the control panel and wall mounting boxes.

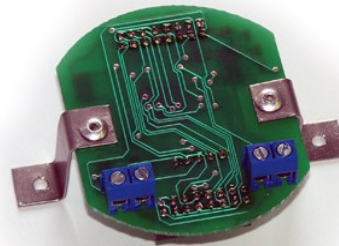

3. Step The rear blue connectors connect the wires (4 wires)
It then screws attach the mounting panel for the selected box.



Wall concealed box 60mm
(accessory)



Plasterboard wall box 60mm
(accessory)

4. Step Attach the cover plate of the wall-mounted panel



5. Step Power on the device



HIGHLIGHTS

Measuring range : -40 - +99°C
Storage temperature: -40 - +50°C
Power supply: 6Volt DC (supplied with power supply)
Switching power: 230VAC max. 5A
Temperature measurement : Automatically every 10 minutes .

The set temperature storage (when power is non-volatile) memory EEPROM.

CONNECTION

